

The Startgate is mainly used for Alpine skiing but also for cross-country skiing, snowboard, etc. The Startgate is mounted between two posts at the start, so the racer has to move the startwand of the Startgate when he starts. To fix the Startgate at the post it is equipped with a chain bracket.



Different Startgate types are available:

- STSnM1S:** manual reset, 1 contact, integrated speech amplifier
- STSnM2S:** manual reset, 2 contacts, integrated speech amplifier
- STSnA1S:** automatic reset, 1 contact, integrated speech amplifier
- STSnA1:** automatic reset, 1 contact, no speech amplifier

FIS homologated Startgate: STSnM2S

 
Startwand STSn-S:

A new startgate is supplied with a screwable startwand plus a spare one.



Startwand STSn-FSTAB:

Alternatively it is possible to acquire a startwand with integrated spring for more protection of the startwand. This startwand is recommended for Selftimer startgates.



Contacts:


ALGE offers models with one, two or four contacts. At each contact (two banana sockets) you can connect a start line. Each contact has a separate micro switch. For FIS races separate start lines are necessary for timer A and B, therefore you need a Startgate with two contacts.

Integrated Speech Amplifier:

ALGE offers models with integrated speech amplifiers. Such Startgates have the advantage that you can connect a headset and talk with the starter through the two-core start cable.

Startwand Reset:

ALGE offers models with automatic and manual reset of the startwand. Automatic reset is mainly used for training and Selftimer. Startgates that are used for racing have a manual rest of the startwand, this means after the start they stay open

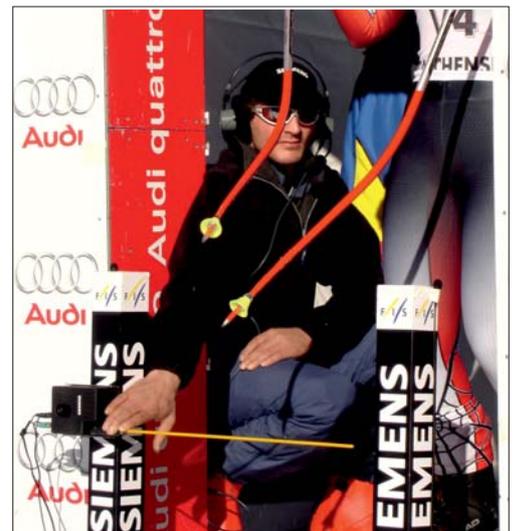

Start Poles with Start Plates SSP:

ALGE-TIMING offers start poles with start plates. The poles are knocked in the snow. The plates are fastened to the poles and mounted into the snow in front of the poles so each racer has the same start conditions. The plate has a carpet so the starter has an ideal grip. Onto one pole you can screw the startgate.

